

The Multi Marine Data Concentrator

The MMDC gets all its inputs from the engine sensors, Paddle Wheel, Ignition switch, and battery. All these inputs go into the 24 pin connector from the engine harness. **Always make sure the MMDC has a good ground and 12 volts before trouble shooting.**

The 5 pin connector is considered the output connector because it delivers all the power and information for the instruments to operate. **Never attach anything other than instruments to the output harness.**

