


Step 1


Step 1

Place 2x8 pieces on outside faces of scrap of post stock

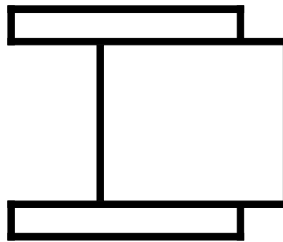

Step 2


Slide second piece of post stock in place.

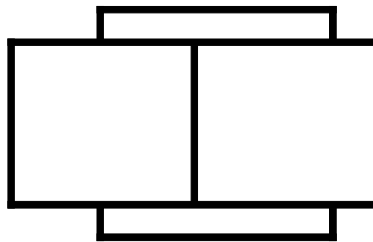

Step 3

Screw 2x to faces of post stock before drilling.


Short vertical lines are the screws.

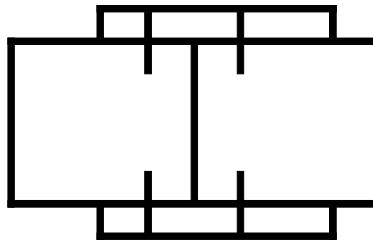

Step 4

Drill holes through post, using drill press, space holes according to plan.

Drilled line is the heavier vertical ones.

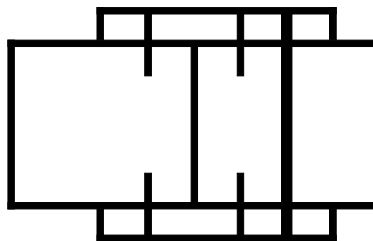

Step 5

Remove stock, to allow sliding onto the posts that will have the cables passing through them, using the holes to guide the drill bit.

You should be able to drill from both sides, as long as you avoid tilting the bit in the guide holes.

